

ACTIVESHOP[®]

Instructions for use


Nail Lamp GLOW S1 Model: FD-369

**Importer:**

ACTIVESHOP Sp. z o.o.
ul. Graniczna 8B, bud. DC2A
54-610 Wrocław, Polska

www.activeshop.com.pl

Rev. A/03/2024

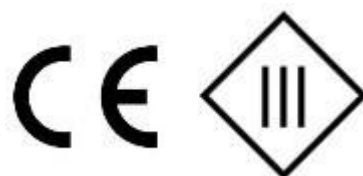

Technical data:

Rated voltage	220 - 240V
Electrical power	168W
Rated frequency	50HZ
Number of LEDs	36LED
Dimensions	23.2x20.5x11.1 cm
Maximum operating time	120 s
Wavelength of light	365 nm, 405 nm

Comments

1. Read the instruction manual carefully before using the lamp for the first time.
2. Do not look directly at the LED light, as it may cause damage to your eyesight.
3. Do not use the lamp when the power supply is damaged.
4. Exposure for too long can cause damage to the skin.
5. Use products designed for LED light curing.
6. Remember to unplug the device from the contact when you are done using it.
7. Keep the device away from children.

Usage:

1. Connect the power supply to the lamp. Do not do this with wet or damp hands.
2. In order for the device to start working, it is necessary to select the appropriate operating mode.
3. On the device there are 4 buttons 10s,30s,60s, 99s (Low heat mode), with which you will set the operating time of the device.



After selecting the appropriate mode, the timer counts down the remaining operating time on the display.

4. In "Low heat mode," the power is increased gradually to minimize the possible discomfort created during the curing of the varnish.
5. The lamp will operate at full power in 10s, 30s and 60s modes.

6. If the user does not turn on any mode, when he puts his hand into the lamp, the built-in motion sensor will activate the lamp. The maximum operating time is 120 seconds.
7. It is possible to pull out the bottom of the lamp, which will make it easier to insert the foot under it when performing a pedicure treatment.
8. When you have finished working, turn off the device and unplug it from the power supply.

SECURITY MEASURES

1. The device is a professional equipment for use in beauty parlors. Operation of the device only by qualified cosmetic personnel allows to avoid undesirable consequences during the treatment.
2. Do not disassemble the device or attempt to use it for purposes other than those indicated in this manual. Any service and repair work must be performed only by an authorized service technician (ACTIVESHOP Ltd. company).
3. Do not install or operate the device near liquids, wet places or with wet hands - so that no liquids get into the device.
4. Immediately remove the plug from the outlet and contact the authorized service provided by ACTIVESHOP Ltd. in the following cases:
 - a) liquid has entered the device, b) the device emits a strange odor, smoke or makes strange sounds, (c) the power cord was damaged, (d) the device was knocked over or its housing was damaged.
5. Do not put any objects on the cables. Do not install the unit where someone may step on the power cord.
6. For safety purposes, remove the power cord from the outlet each time you finish working with the device.
7. Do not insert anything into the opening of the device. If a foreign object gets into the hole, remove the cord from the outlet and contact the distributor or manufacturer.
8. Do not place the device on an unstable cart, shelf or vehicle. If dropped, the device may be damaged.
9. In order to guarantee the established useful life of the device, it is recommended to keep an interval of one minute before pressing the power button again (between switching on and off and vice versa).
10. The power supply must comply with the specifications on the nameplate. Otherwise, there is a risk of incorrect operation of the device its damage or even burning.

NOTE

1. In case of damage to the power cord or other malfunctions, contact an authorized service center - this will avoid danger.
2. This equipment may be used by children at least 8 years of age and by persons with impaired physical and mental capabilities and persons with inexperience and lack of familiarity with the equipment, if supervision or instruction is provided regarding the use of the equipment in a safe manner so that the associated risks are understood.
3. The device is not intended for play by children. Do not allow children to play with the device.
4. Do not leave the device unattended when children or persons without sufficient knowledge of how to use the device are in the vicinity.
5. This electrical appliance is not a toy. Improper use or contact with the electrical appliance may pose a health risk or lead to death, so use and store the appliance out of the reach of children.



DISPOSAL OF EQUIPMENT Waste electrical appliances, fixtures and packaging should be sent to raw material reprocessing centers in accordance with environmental protection principles. Electrical appliances should not be disposed of in household waste containers. Follow the rules for discarding this type of equipment.

In order to protect the environment in accordance with Directive 2012/19/EC on waste electrical and electronic equipment, waste electrical equipment should be collected separately and then sent to collection centers for waste electronic and electrical equipment.

At the end of their useful life, as well as old appliances contain full-value recyclable components, so they should be handed over for recycling. Therefore, they should be handed over to appropriate collection points, as well as they can also be handed over to ACTIVESHOP Ltd.

STORAGE AND TRANSPORT

The device should be transported at a temperature in the range of (-) 20 °C to (+) 50 °C only in its original packaging. Store the device in a well-ventilated and relative humidity of no more than 75%. Operating temperature from (+) 10 °C to (+) 40 °C. During storage and transportation processes, the device must not be thrown or dropped, exposed to mechanical shocks or atmospheric agents.

