

# ACTIVESHOP<sup>®</sup>

## INSTRUCTIONS FOR USE

Activ Power Milling Machine N20



**Importer:**

ACTIVESHOP Ltd.  
8b Graniczna St., building  
DC2A 54-610 Wrocław,  
Poland  
[www.activeshop.com.pl](http://www.activeshop.com.pl)  
Rev. A/05/2024



## Technical data

<b>Rated voltage</b>	<b>220V/240V</b>
<b>Electrical power</b>	<b>35W</b>
<b>Rated frequency</b>	<b>50/60Hz</b>
<b>Torque</b>	<b>3.5 N.cm</b>
<b>Head weight</b>	<b>160g</b>
<b>Head dimensions</b>	<b>13.5cm x 2.7cm</b>

## Note

1. Clean the device periodically to prevent the accumulation of dirt, dust and other undesirable substances. Accumulation of the above, can lead to malfunction of the device or even damage to the equipment.
2. It is not allowed to wrap the power cord around the device, it may cause malfunction of the cord.
3. Always make sure that the device is powered from a source with the correct voltage rating. Make sure the plug is properly inserted into the outlet. Failure to do so can lead to fire, electric shock or burns
4. The cable must not be modified, stretched, excessively bent or twisted.
5. Nothing heavy can be placed on the cable.
6. Prevent dust or other harmful elements from getting into the plug, base or head by using dust absorbers.
7. Do not hit or throw the device. If the device is damaged by hitting or falling, you cannot continue to use it.
8. Do not attempt to disassemble or repair the equipment. For repairs, contact the distributor from whom the equipment was purchased or an authorized service center.

## Assembly

1. Identify the location of all connectors
2. Insert the head cable plug, according to the position of the pins in the socket.
3. Make sure the base is turned off before connecting the head.

## Connecting the foot pedal

- Visually assess whether there is any damage to both the base and the controller plug.
- Connect the foot controller plug to the base.
- To use the foot controller control, switch the On/Off/Foot Control button to "foot" foot mode.

## Preparation before use

- Make sure the head speed is set to the minimum level.
- Make sure that the cutter is properly locked. If not, use the "twist lock" switch.
- While holding the head, turn on the power button.

## Use of the product

- Using the potentiometer, set the desired speed.
- Wanting to increase the operating speed, move the potentiometer to the right.
- Wanting to reduce the operating speed, move the potentiometer to the left.


## Set left/right rotation

- The direction of rotation of the workpiece, can be changed by a switch located on the base (FOR/REV). Changing the direction of rotation is possible only when the motor is switched off.

## Changing modes

- Select desired mode With the HAND/FOOT button, located on the base.
- HAND - operation head behind with the help of a potentiometer.
- FOOT - operation of head behind switch

foot, after first setting the speed on a potentiometer, connect to the base.

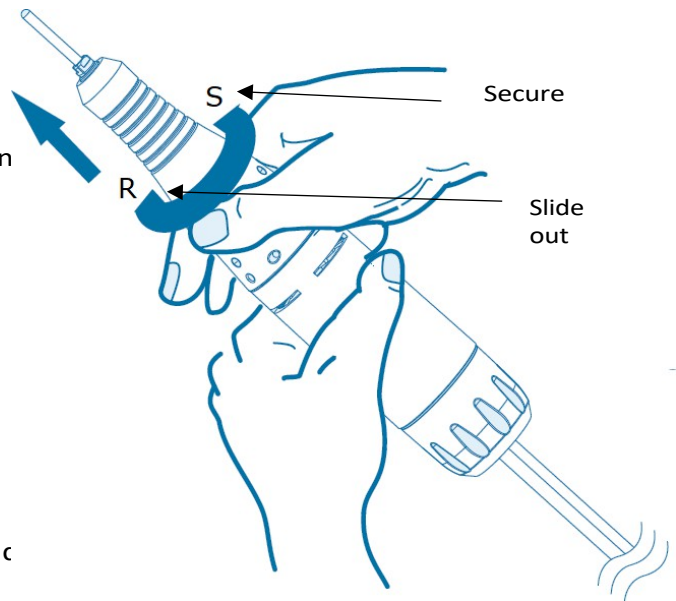

### Milling Cutter Replacement

To replace the cutter, turn the Twist Lock knob counterclockwise in the "R" direction.

At this point you can replace the ejected cutter from the spindle and replace it with a new one.

After placing the cutter in the spindle, turn the Twist Lock knob clockwise in the direction of the letter "S" until you hear the characteristic "click".

The desired speed of the cutter depends on the type and material of the cutter. In this

In terms of scope, refer to the information provided by the manufacturer

**\*Never switch the Twist-Lock knob during operation.**

Cutter diameter	Rotation max
5mm	41000
7mm	30000
10mm	20000
13mm	16000



### SECURITY MEASURES

1. The device is a professional equipment for use in beauty parlors. Operation of the device only by qualified cosmetic personnel allows to avoid undesirable consequences during the treatment.
2. Do not disassemble the device or attempt to use it for purposes other than those indicated in this manual. Any service and repair work must be performed only by an authorized service technician (ACTIVESHOP Ltd. company).
3. Do not install or operate the device near liquids, wet places or with wet hands - so that no liquids get into the device.
4. Immediately remove the plug from the outlet and contact the authorized service provided by ACTIVESHOP Ltd. in the following cases:
  - a) liquid has entered the device, b) the device emits a strange odor, smoke or makes strange sounds,
  - c) the power cord was damaged, (d) the device was knocked over or its housing was damaged.

5. Do not put any objects on the cables. Do not install the unit where someone may step on the power cord.
6. For safety purposes, unplug the power cord from the outlet each time you finish working with the device.
7. Do not insert anything into the opening of the device. If a foreign object gets into the hole, remove the cord from the outlet and contact the distributor or manufacturer.
8. Do not place the device on an unstable cart, shelf or vehicle. If dropped, the device may be damaged.
9. In order to guarantee the established useful life of the device, it is recommended to keep an interval of one minute before pressing the power button again (between switching on and off and vice versa).
10. The power supply must comply with the specifications on the nameplate. Otherwise, there is a risk of incorrect operation of the device its damage or even burning.

#### **NOTES:**

1. In case of damage to the power cord or other malfunctions, contact an authorized service center - this will avoid danger.
2. This equipment may be used by children at least 8 years of age and by persons with impaired physical and mental capabilities and persons with inexperience and lack of familiarity with the equipment, if supervision or instruction is provided regarding the use of the equipment in a safe manner so that the associated risks are understood.
3. The device is not intended for play by children. Do not allow children to play with the device.
4. Do not leave the device unattended when children or persons without sufficient knowledge of how to use the device are in the vicinity.
5. This electrical appliance is not a toy. Improper use or contact with the electrical appliance may pose a health risk or lead to death, so use and store the appliance out of the reach of children.



#### **DISPOSAL OF THE DEVICE**

Dispose of used electrical appliances, fixtures and packaging to raw material reprocessing centers in accordance with environmental protection principles. Electrical appliances should not be thrown into household waste containers. Follow the rules for discarding this type of

equipment. In order to protect the environment in accordance with Directive 2012/19/EC on waste electrical and electronic equipment, waste electrical equipment should be collected separately, and sent to collection centers for waste electronic and electrical equipment.

At the end of their useful life, as well as old appliances contain full-value recyclable components, so they should be handed over for recycling. Therefore, they should be handed over to appropriate collection points, as well as they can also be handed over to ACTIVESHOP Ltd.

#### **STORAGE AND TRANSPORT**

The device should be transported at a temperature in the range of (-) 20 °C to (+) 50 °C only in its original packaging. Store the device in a well-ventilated and relative humidity of no more than 75%. Operating temperature from (+) 10 °C to (+) 40 °C. During storage and transportation processes, the device must not be thrown or dropped, exposed to mechanical shocks or atmospheric agents.