

ACTIVESHOP[®]

USER MANUAL

Saeyang dust absorber Marathon Levent



Importer:

ACTIVESHOP Sp. z o.o.
8b Graniczna St., building
DC2A 54-610 Wrocław,
Poland
www.activeshop.com.pl
Rev. A/09/2024




Technical data:

Input voltage	220-240V, 50/60Hz
Output voltage	24V
Dimensions	210 x 252 x 77.7 mm
Maximum speed	4,000 rpm
Power	52.8W

OPERATING NOTES:

1. The device is designed for indoor use in dry and enclosed areas.
2. Do not attempt to repair the device yourself. In the event of a malfunction, send the unit to a service center to avoid the danger of electric shock.
3. If there are manufacturing defects, follow the information on the warranty card.
4. Keep the device away from strong streams of heat, cold, do not expose it to direct sunlight or moisture.
5. Keep away from places where the device may be exposed to mechanical or similar damage.
6. Do not allow direct contact with water or other liquid.
7. Do not touch the device with wet or damp hands.
8. If the device gets wet, immediately disconnect it from the power source.
9. Do not insert fingers or other objects into the dust absorber fans. Such action may cause injury or damage to the device.
10. Wait a while for the device to reach room temperature before plugging it in. Do not turn on a cold or overheated device.
11. Unplug the device from the power supply if:
It is not used for a long time, It is being cleaned,
There is a malfunction in the device.
12. During the manicure treatment, the hand should be over the protective grid.
13. The disposable filter in the absorber should be replaced after each use of the device. The HEPA filter, on the other hand, should be cleaned regularly to prolong its life. It can be gently vacuumed. Do not clean it with water, it may damage the filter.
14. Proper use of the device and regular emptying of the filter will ensure long and trouble-free operation.
15. Do not pierce the material with sharp objects, do not expose to heated surfaces.

Construction of the device:

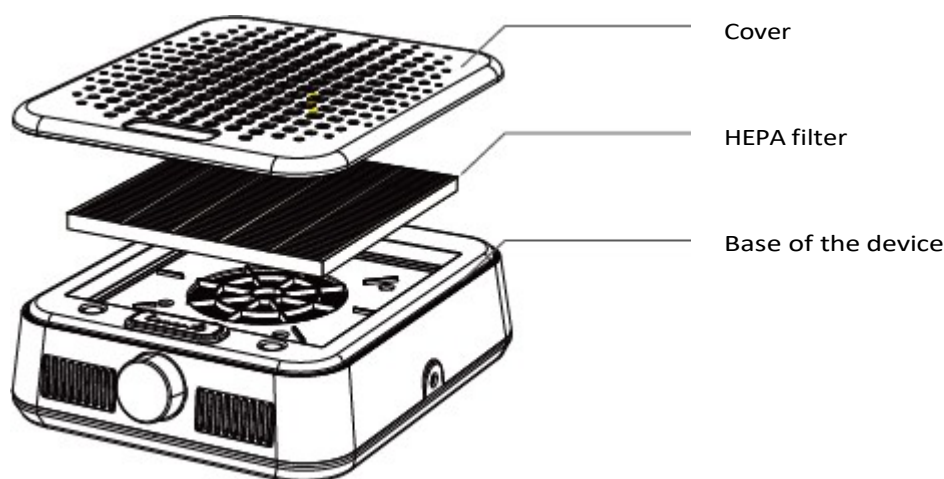


Filter replacement:

HEPA filter: The filter should be cleaned regularly, each time after use. It can be gently vacuumed. Do not soak it with water. When the filter is too worn out, replace it with a new one.

Remember to do this when the device is unplugged.

Disposable filter: Change it after each use of the canister to prevent accumulation of dust and dirt.

Included:

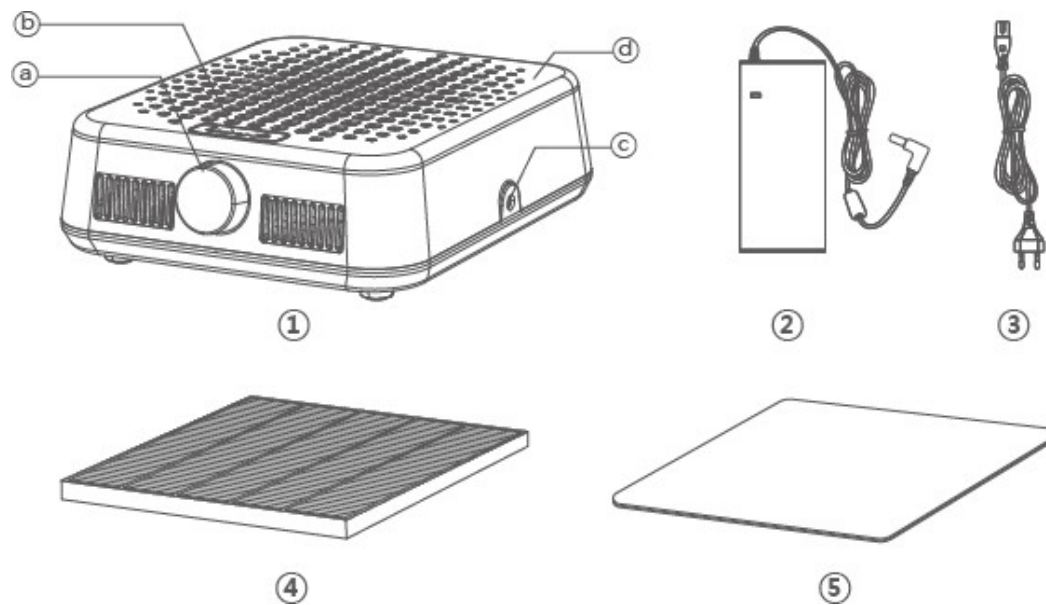

1. Appliance base
 - a) Knob for adjusting the power
 - b) Logo
 - c) Input for power adapter
 - d) Cover
2. Power supply
3. Cable
4. HEPA filter
5. Disposable filter

MAINTENANCE AND CLEANING:

- The absorber consists of chrome-plated, lacquered parts.
- To clean the absorber, do not use abrasive, highly corrosive agents, pastes, acetone, solvents, alcohol-based products.
- The outer parts of the device can be cleaned with a soft, damp sponge. A solution of water and mild detergent (soap, shampoo) will work best.
- In case of stronger dirt, the device can be cleaned using preparations designed for cleaning delicate surfaces.
- Dust deposited on the fans should be cleaned with a small brush from the side of the grille and from the side of the filter. After removing the dust with a brush, it is additionally recommended to use coupled air, which will thoroughly remove the remaining dust.

Note: The device should be cleaned and disinfected after turning off the device and disconnecting it from the power source.

INSTRUCTIONS FOR USE

1. Before the first use, place the HEPA filter and disposable filter in the canister.
2. First install the HEPA filter by placing it on the base of the unit (as shown in the picture above).
3. Then place the grille over it by attaching it to the unit.
4. Place the disposable filter on top of the grille so that it is completely covered.
5. Connect the device to the power supply. Do not do this with wet or damp hands.
6. Turn the control knob clockwise to set the desired power of the absorber.
7. To turn off the canister, turn the knob completely to the left.

8. Unplug the appliance when finished.

DISINFECTION:

Disinfect the canister with alcohol-free products designed to disinfect delicate surfaces.

It should not be excessively soaked.

It is best to clean the outside with a damp cloth, then wipe dry.

SAFETY MEASURES

1. The device is a professional equipment for use in beauty parlors. Handling the device only by qualified cosmetic personnel avoids undesirable consequences during treatment.
2. Do not disassemble the device or attempt to use it for purposes other than those indicated in this manual.
(2) Any servicing and repairs must be performed only by an authorized service technician (ACTIVESHOP L t d . company).
3. Do not install or operate the device near liquids, wet places or with wet hands - so that no liquids get into the device.
4. Immediately unplug the device from the outlet and contact the authorized service provided by ACTIVESHOP Ltd. in the following cases:
(a) liquid has gotten into the device, (b) the device emits a strange odor, smoke or makes strange sounds, (c) the power cord has been damaged, (d) the device has been knocked over or its housing has been damaged.
5. Do not lay any objects on the cables. Do not install the device in places where someone may step on the power cord.
6. For safety purposes, unplug the power cord from the outlet each time you finish working with the device.
7. Do not insert anything into the opening of the device. If a foreign object gets into the hole, remove the cord from the outlet and contact the distributor or manufacturer.
8. Do not place the device on an unstable cart, shelf or vehicle. If dropped, the device may be damaged.
9. In order to guarantee the established useful life of the device, it is recommended to keep an interval of one minute before pressing the power button again (between switching on and off and vice versa).
10. The power supply must comply with the specifications on the nameplate. Otherwise, there is a risk of incorrect operation of the device its damage and even burning.

CAUTION:

1. In case of damage to the power cord or other malfunctions, contact an authorized service center - this will avoid danger.
2. This device can be used by children at least 8 years old and by people with reduced physical and mental capabilities and those with inexperience and lack of familiarity with the equipment, if supervision or instruction on how to use the equipment in a safe manner is provided, so that the associated risks are understood.
3. The equipment is not intended for play by children. Do not allow children to play with the equipment.
4. Do not leave the appliance unattended when children or persons without sufficient knowledge of the use of the appliance are in the vicinity.
5. This electrical appliance is not a toy. Improper use or contact with the electrical appliance may pose a health risk or lead to death, so use and store the appliance out of the reach of children.



DISPOSAL OF THE DEVICE

Dispose of used electrical appliances, fixtures and packaging to raw material reprocessing centers in accordance with environmental protection principles. Electrical appliances should not be disposed of in household waste containers. Follow the rules for discarding this type of equipment. In order to protect the environment in accordance with Directive 2012/19/EC

concerning waste electrical and electronic equipment, waste electrical equipment should be collected separately, and then handed over to collection points for waste electronic and electrical equipment.

At the end of their useful life, as well as old appliances contain full-value recyclable components, so they should be handed over for reprocessing. Therefore, they should be handed over to appropriate collection points, as well as they can also be handed over to ACTIVESHOP Ltd. **STORAGE AND TRANSPORT**

The device should be transported at a temperature range of (-) 20 °C to (+) 50 °C only in its original packaging. Store the device in a well-ventilated area with a relative humidity of no more than 75%. Operating temperature from (+) 10 °C to (+) 40 °C. During storage and transportation processes, the device must not be thrown or dropped, exposed to mechanical shocks or atmospheric agents.